



# Disable/Enable Keyboard Beep

## Step 1

From the Home Screen, press the Menu button on the middle on the screen.



## Step 2

Press the Page Down button to display the second page of Main menu. Press the **Setup Menu** option.



## Step 3

Select the **Keyboard Beep** Option.



# Step 4

---

---

If you want to disable the Keypad Beep, **press No.**

If you want to enable the Keypad beep, **Press Yes.**

