





# Set Password For Refunds

## Step 1

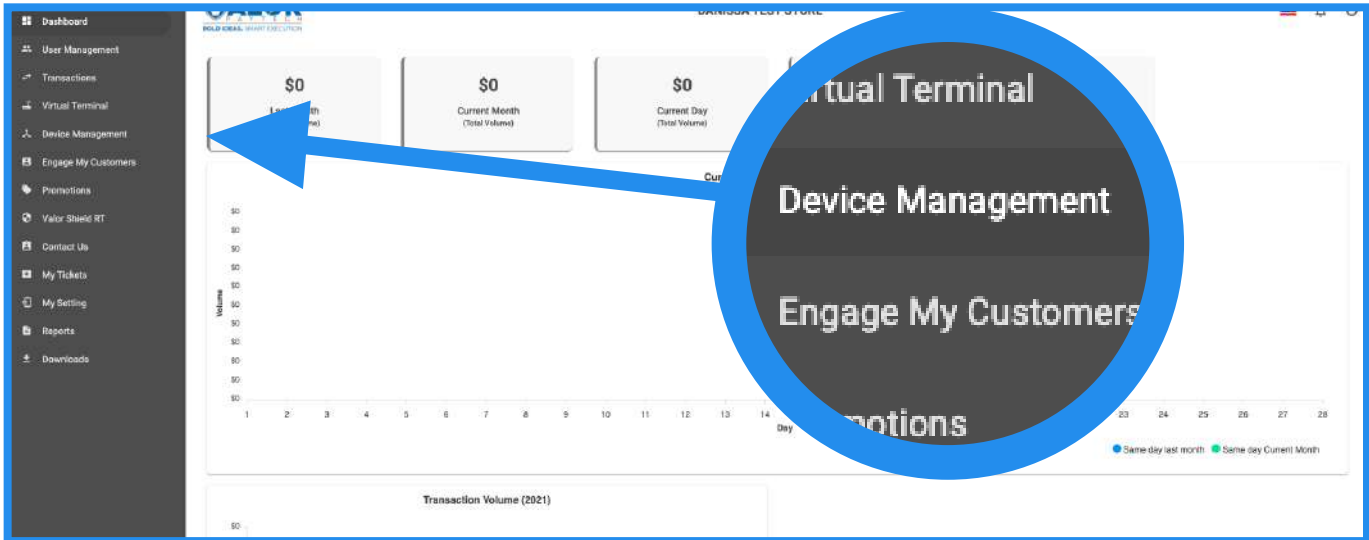

Select **Device Management** in the sidebar menu.

## Step 2

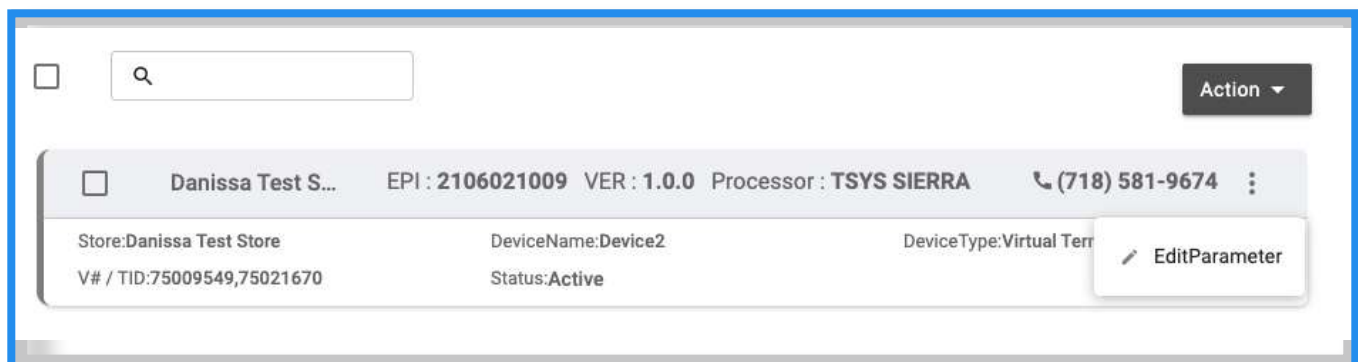

Select the **ellipsis (:)** on the top right of the device snapshot, then click on **Edit Parameters**.

# Step 3

^ TERMINAL & TRANSACTION

AVS NONE	AVS ACTION ON FAILED APPROVE AND NOTIFY
EXTERNAL PIN PAD SUPPORT YES NO	SPLIT PAYMENT YES NO
MANUAL CARD ENTRY YES NO	CASH BACK ON DEBIT CARDS YES NO
BATCH OUT SETTLEMENT TIME ( EST ) 10:30 PM	QSR (RECEIPT & SIGNATURE ARE NOT REQUIRED ) YES NO
POS INTEGRATION YES NO	PASSWORD FOR REFUND THRESHOLD 100 YES NO
CASH SALE MENU YES NO	

Expand **Terminal & Transaction**, and you will see a toggle to enable or disable the **Password for Refund**. Once toggled on, you can set a refund threshold. Any refunds attempted over the amount set in the threshold will require the password to be entered.

# Step 4



After making parameter changes, you must perform a download on the device by pressing ★ > 6 > OK button.